BRAUN

WK 210
WK 300

Aqua Express

Type 3217
Type 3219

Internet:
www.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg / Germany

3-217-391/00/IV-07
GB/Korea

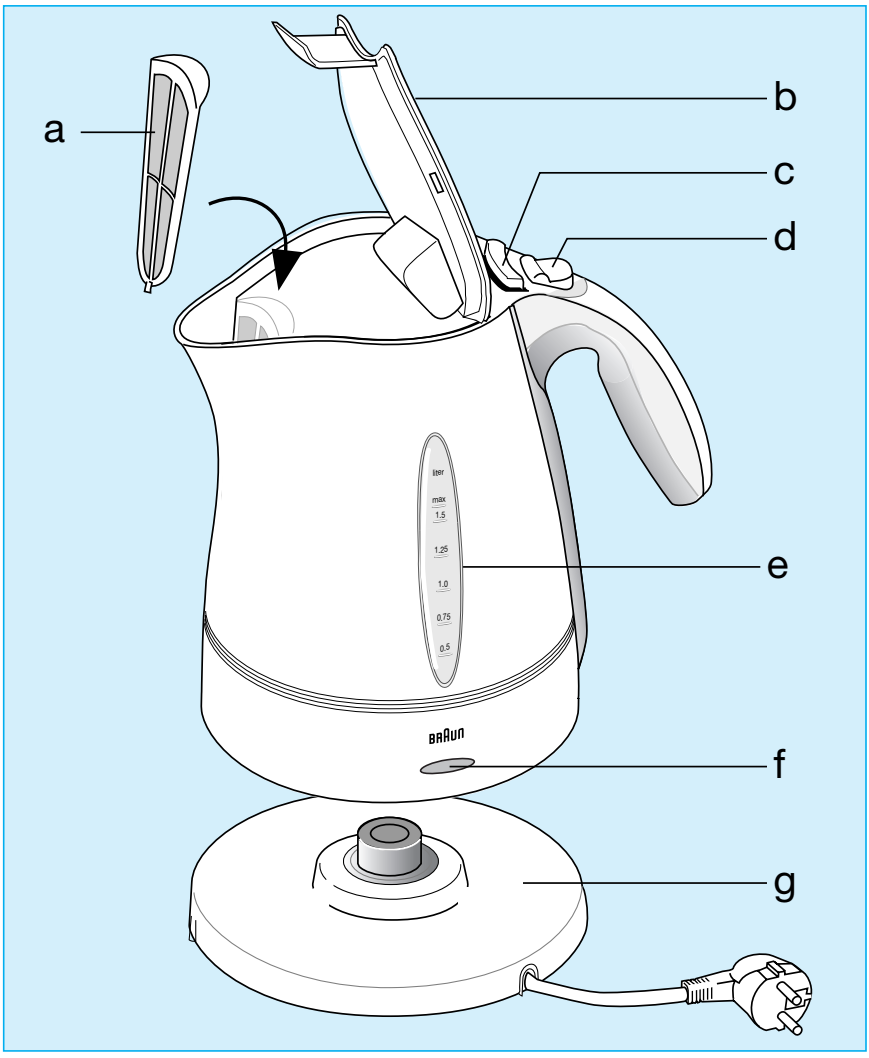
a
b
c
d
e
f
g
liter
max
1.5
1.25
1.0
0.75
0.5
BRAUN

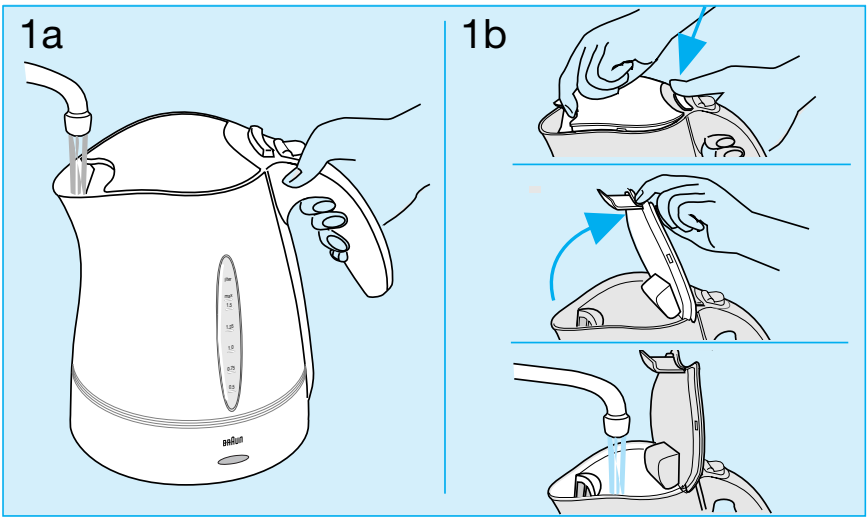
1a
1b

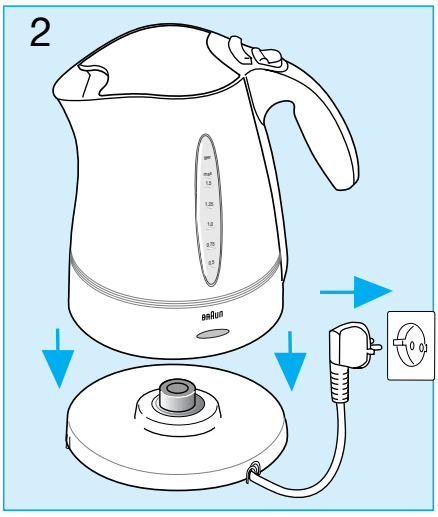
2

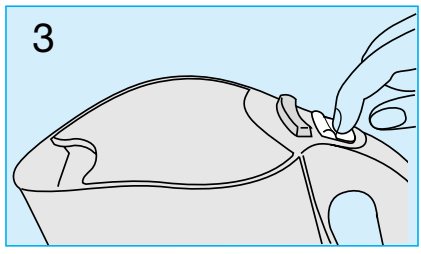
3

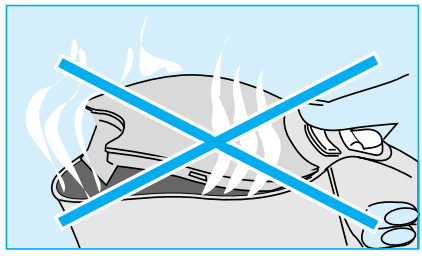

Thank you for purchasing the Braun AquaExpress, we hope that the design and the rapid boil feature give you many years of pleasure.

Before first use, read the use instructions carefully and keep them for future reference.

Important

- Make sure that your voltage corresponds to the voltage indicated on the kettle. The kettle may only be operated on the base (g) supplied.
  WK 200 base: Type 3217/S10
  WK 300 base: Type 3219/S20
- This appliance is intended for household use only.
- Only use the kettle to heat water.
- Only operate the kettle on a dry, flat and fixed surface.
- Never let the cord hang down from the worktop. The cord length may be reduced by winding it up with the cord storage facility. Keep the appliance out of reach of children.
- The base, the kettle or the cord must never get in contact with hot surfaces (e. g. stove plates).
- In case the empty kettle is switched on accidentally, the overheating protection will cut it off automatically. In this case, allow the kettle 10 minutes to cool down before filling it with water.
- Caution: Do not overfill the kettle! Water could boil over and cause scalding.
- Do not open the lid while water is boiling.
- During operation, the kettle will get hot. Therefore only use the handle to carry it. Always hold the kettle in an upright position, to avoid boiling water come out.
- Check the cord regularly for possible damage.
- If the appliance shows any defect, stop using it and take it to a Braun Service Centre for repair. Faulty or unqualified repair work may cause accidents or injury to the user.
- Braun electric appliances meet applicable safety standards.

Model WK 300 only:
- Make sure not to operate too many other electric appliances when using the kettle.
- Socket fuse at least: 16 A

Description

a Scale filter (removable)
b Lid
c Lid release button
d On/off switch
e Water level indicator
f Pilot light
g Base with cord storage

- Max. capacity: 1.6 l water

Before first use

Before first use, fill two cups of water into the kettle, add one cup of household vinegar (5 % acid) and bring it to a boil. Then boil the kettle twice with the maximum quantity of clear water.

Setting into operation

1a Fill the kettle through the spout with the lid closed,
or:
1b Press the lid release button (c), open the lid, fill with water and close the lid again (the kettle will not work with the lid open).
2 Place the kettle on the dry base and plug in the base.
3 Press the on/off switch (d), the pilot light will come on (do not open the lid when the kettle is switched on).
4 When the water has boiled, the kettle automatically switches off.
You may also stop the heating procedure at any time by pressing the on/off switch (d).

Automatic cut-off feature

The kettle switches off when...
– the water has boiled,
– it contains no water (in case of accidental switching on),
– the lid is opened,
– it is taken off the base.

If the scale filter is not installed, the automatic cut-off will be delayed.

Cleaning

Before cleaning, unplug the base.
Kettle or base must never be immersed in water.
Clean the outside of the kettle with a damp cloth, the inner part can be cleaned by means of a brush. The removable scale filter is dishwasher-proof.

Descaling

- In order to extend the lifetime of the kettle, it should be descaled regularly.
- Boil 0.8 l water in the kettle.
- When boiled, add 0.4 l household vinegar (5 % acid). Leave the solution in the kettle overnight.
- Empty the kettle and rinse the inside thoroughly with fresh water. Fill the kettle with fresh water and boil it.
- Empty the kettle and rinse it again with fresh water.
- If the kettle still contains scale, repeat this procedure.
- To remove any scale from the scale filter, you may soak it in diluted vinegar.

Subject to change without notice.

This product conforms to the European Directives EMC 89/336/EEC and Low Voltage 2006/95/EC. CE

한국어

브라운 전기주전자를 구입하여 주셔서 감사합니다.
본 제품의 디자인과 급속가열 기능이 소비자분들의 욕구를 충족시켜 드리기를 바랍니다.

사용 전 사용설명서를 주의 깊게 읽으십시오.
잘 보관하시어 향후에도 참고하시기 바랍니다.

중요사항

전압이 주전자 바닥에 인쇄되어 있는 전압과 일치하는지 확인하여 주시기 바랍니다.
본 주전자는 함께 제공된 받침대(g)에서만 작동할 것입니다.
WK200 받침대 : 3217 / S10 타입
WK300 받침대 : 3219 / S20 타입

- 본 제품은 가정용으로 제작되었습니다.
- 본 제품은 물을 데우는 용도로만 사용하시기 바랍니다.
- 본 제품은 물기가 없고, 평평하며 고정된 표면에서 사용하십시오.
- 전기선이 제품상단에서 늘어지지 않도록 하십시오. 코드선의 길이는 받침대 밑에 감아 짧게 줄여 놓을 수 있습니다.
  어린이의 손에 닿지 않도록 하여 주십시오.
- 받침대, 주전자, 코드 선은 절대로 뜨거운 표면에 (예, 난로 표면) 닿지 않도록 주의하여 주십시오.
- 빈 주전자에 전원이 들어왔을 경우에는 과열방지 장치가 자동적으로 전원을 차단할 것입니다. 이러한 경우, 물을 채우기 전에 약 10분간 주전자의 열을 식혀주십시오.
- 주의 : 주전자에 내용물을 너무 많이 넣지 마십시오. 물이 끓어 넘쳐 화상을 입을 수도 있습니다.
- 물이 끓는 동안 뚜껑을 열지 마십시오.
- 작동 중에 주전자가 매우 뜨거우므로 주전자 손잡이를 잡아서 옮기시기 바랍니다. 주전자는 기울여지지 않게 똑바로 잡아야 물이 밖으로 흐르지 않습니다.
- 전기선은 파손여부를 정기적으로 점검하여 주시기 바랍니다.
- 만일 제품에 어떠한 결함이 생기면 사용을 중지하시고, 브라운 서비스센터에 수리를 의뢰하시기 바랍니다. 잘못된 혹은 지정센터가 아닌 곳에서의 수리는 사고나 부상의 원인이 될 수도 있습니다.
- 브라운의 전기 제품은 적용 가능한 안전기준을 통과하였습니다.

모델 WK300 해당 :
- 위 모델의 주전자 사용 시 지나치게 많은 수의 다른 전기제품을 함께 사용하지 마십시오.
- 최소전원소켓퓨즈 : 16A
- 정기적으로 전기코드의 손상 여부를 점검하시고, 손상되었거나 작동이 안될 경우 위험하니 더 이상 사용하지 마십시오. 손상된 코드는 가까운 브라운서비스센터(대우전자서비스 1588-1588)로 문의해 주십시오.
- 제조일시를 확인하기 위해서는 제품 하단의 로트번호를 참고하시기 바랍니다. 첫자리는 제조년도의 마지막 숫자를 나타내며, 다음 두 자리 숫자는 제품이 생산된 주를 표시합니다. 예 : 429-이 제품은 2004년 29주차에 생산된 제품입니다.

제품 명칭

가. 스케일 필터(분리가능)
나. 뚜껑
다. 뚜껑분리단추
라. 전원(온/오프) 스위치
마. 수위표시기
바. 표시등
사. 받침대 겸 코드선 보관

- 최대용량 : 1.6리터의 물
- 본 제품은 유럽의회 지침서 89/336/EEC에 의해 마련된 EMC 기준과 저전압규제 안 (73/23 EEC)에 의거하여 생산되었습니다.

CE

처음 사용하실 때

본 제품은 처음 사용하기 전 주전자에 두 컵 분량의 물을 채우고, 한 컵 분량의 가정용 식초(5% 산)를 넣어 끓여 주십시오. 다시 깨끗한 물로 최대용량까지 채우고 나서 두 번 정도 더 끓여 주십시오.

사용방법

1a 뚜껑을 닫은 채로 입구를 통해 물을 채우거나,
혹은 ;
1b 뚜껑분리단추(c)를 눌러 뚜껑을 열어서 물을 채운 후 다시 뚜껑을 닫습니다.
(뚜껑이 열려 있으면 주전자가 작동되지 않습니다.)
2 받침대에 물기가 없는 것을 확인하고 주전자를 올려놓은 후 전원을 연결 하십시오.
3 전원 스위치(d)를 누르면 표시등에 불이 들어옵니다.(주전자에 전원이 들어오면 뚜껑을 열지 마십시오.)
4 물이 끓으면 자동으로 전원이 꺼지게 됩니다. 가열 중에도 전원스위치(d)를 눌러 가열을 중지시킬 수 있습니다.

자동전원차단기능

주전자는 다음과 같은 상황이 되면 자동으로 전원이 차단됩니다.
- 물이 다 끓었을 때
- 물이 없을 때 (실수로 전원이 켜졌을 경우에)
- 뚜껑이 열려 있을 때
- 받침대에서 떨어져 나왔을 때
  스케일 필터가 설치되어 있지 않을 경우에는 자동전원차단 시간이 더 걸립니다.

세척

세척하기 전 코드를 뽑아주십시오.
주전자나 받침대는 절대로 물에 담그지 마십시오.
주전자 외부는 젖은 헝겊으로 닦고 내부는 식기세척기를 사용하셔도 무관합니다.

오염(스케일)제거

- 주전자의 사용기간을 늘리기 위해서 정기적으로 내부의 오염을 제거하여 주셔야 합니다.
- 주전자 안에 0.8리터의 물을 끓여 주십시오.
- 끓으면 0.4리터의 가정용 식초(5%산)를 첨가한 후 하룻밤동안 그대로 놓아두십시오.
- 주전자의 용액을 비운 후 내부를 깨끗한 물로 철저히 헹구어 주십시오. 주전자에 깨끗한 물을 채운 후 한번 끓여 주십시오.
- 주전자를 비운 후 다시 깨끗한 물로 헹구어 주십시오.
- 그래도 주전자에 오염이 남아 있으면 위의 세척과정을 반복하십시오.
- 스케일필터에서 오염을 제거하려면, 스케일필터를 희석 식초에 담가주십시오.

사전통보 없이 변경될 수 있습니다.

품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내에라도 소비자의 귀책사유에 의한 파손 (전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. (**구입시 영수증을 잘 보관하시어 애프터 서비스 시 불이익이 없도록 하십시오.**)
- 애프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

브라운 제품의 보상기준은 재정경제부고시 소비자 피해보상규정에 따릅니다.
A/S 문의: 1588-1588
가까운 대우일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:
전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.
http://www.braun.com
http://www.braun.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고		판매점	
객			

한국 피앤지 판매 (유)
서울시 강남구 도곡2동 448-2
전화 080-200-6000(수신자부담)